

Werks

COMPOSITES

997 Turbo Carbon Fiber Rear Diffuser Installation Instructions




Supplied Hardware:



Installation Instructions:

Thoroughly check oil leaks and make necessary repairs before installing the diffuser

Remove subframe bolts and rear bumper support screws shown in photo below

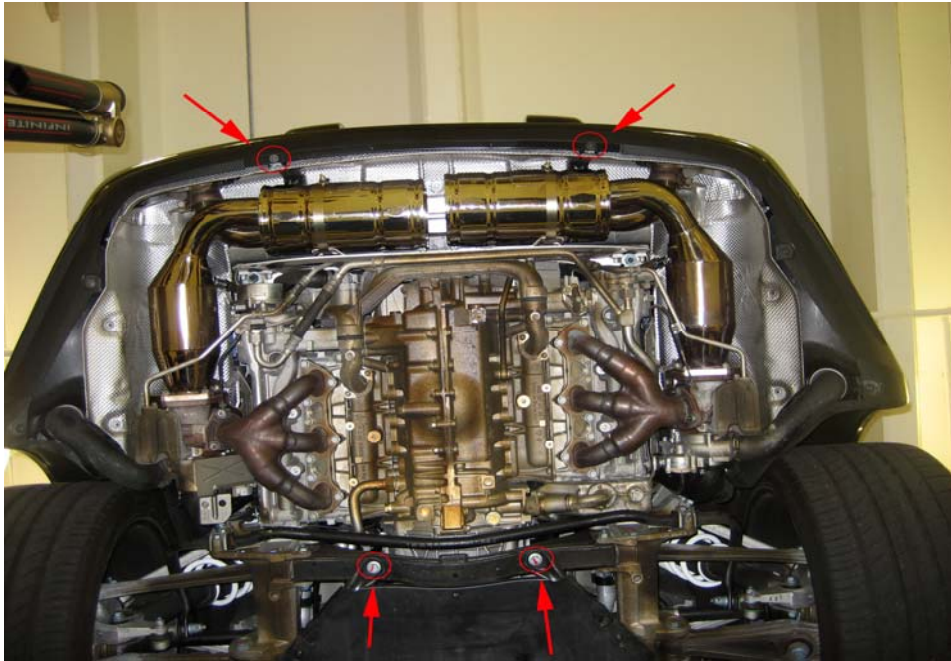

- Install diffuser using the supplied hardware as shown below
 - o Tighten Subframe bolt to Porsche factory specs

